


## Headliner

### Removal


1. **NOTE:** *RH* side shown, *LH* side similar.

Remove the RH and the LH sun visor.

1. Remove the retainer cap.
2. Release the retainer.
3. Remove the sun visor.
4. If equipped, disconnect the electrical connector.

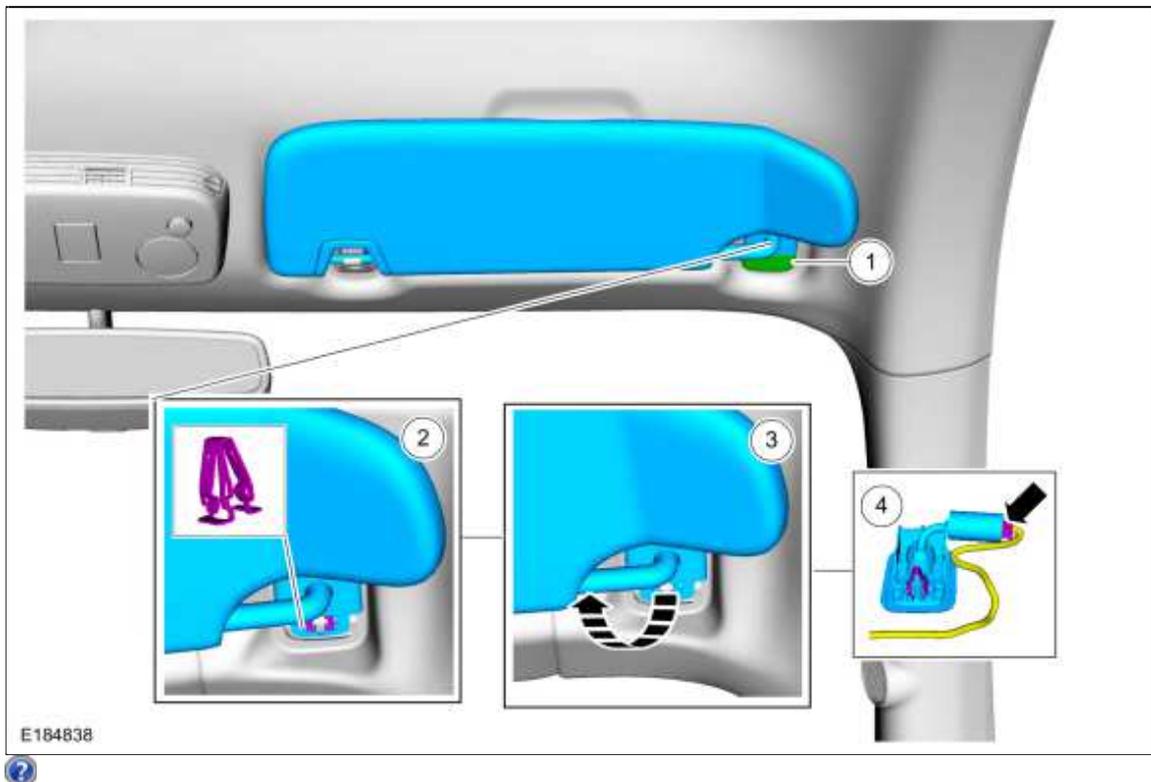

2. Remove the LH and the RH A-pillar trim panels.  
Refer to: [A-Pillar Trim Panel - Coupe](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Detach the wire harness and electrical connector retainers and disconnect the electrical connector.

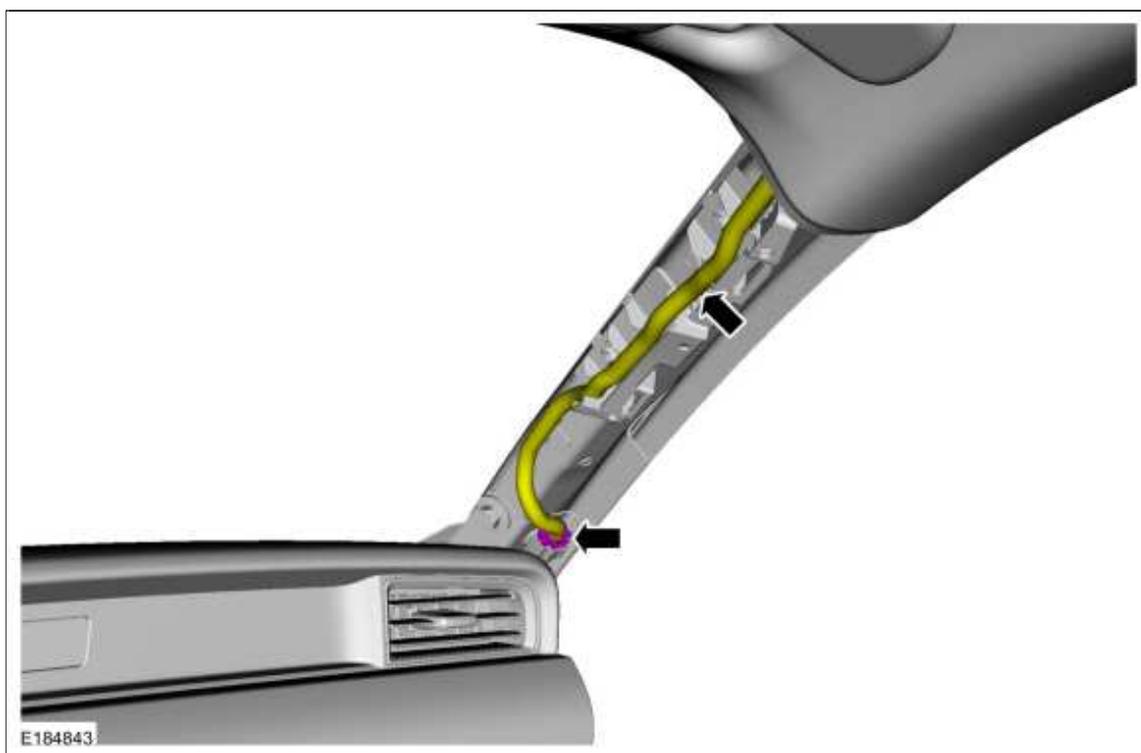


4. **NOTE:** *RH* side shown, *LH* side similar.

On both sides, remove the retainer and the sun visor clip.




5. If equipped, disconnect the rear view mirror electrical connector.

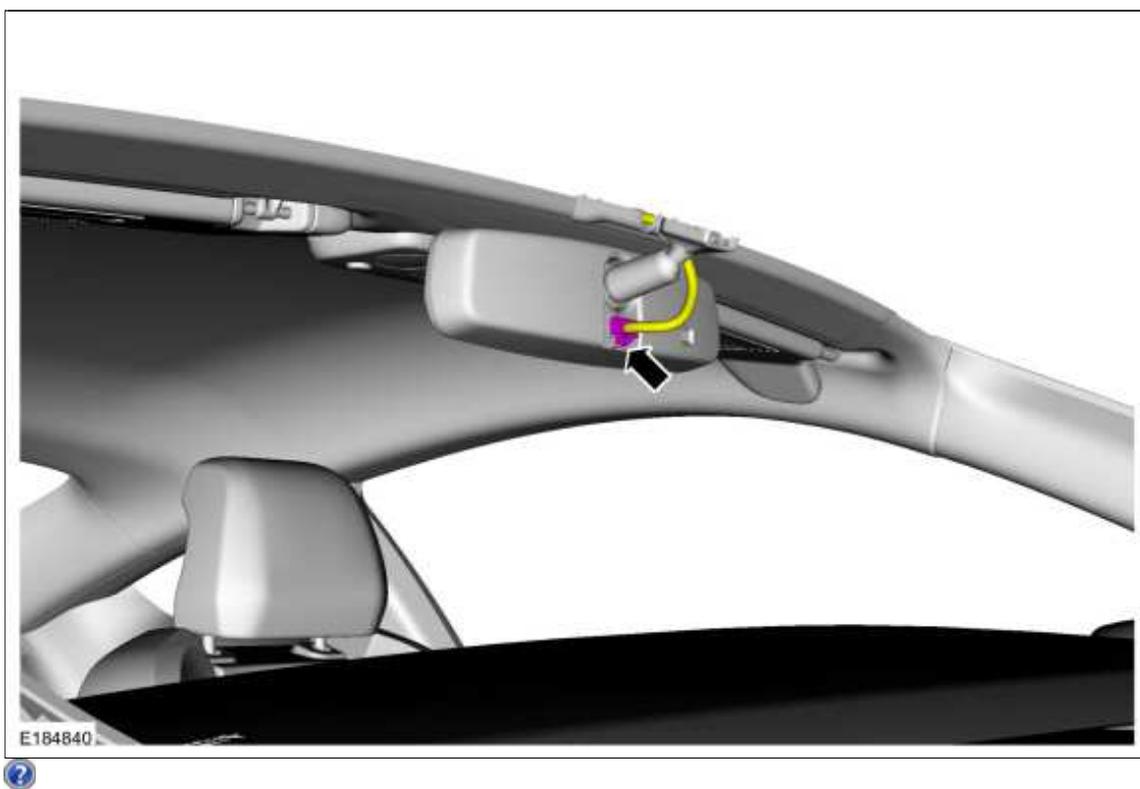

6. **NOTE:** *LH* side shown, *RH* side similar.

On both sides, release the clips, disconnect the tether clip and remove the D-pillar trim panel.

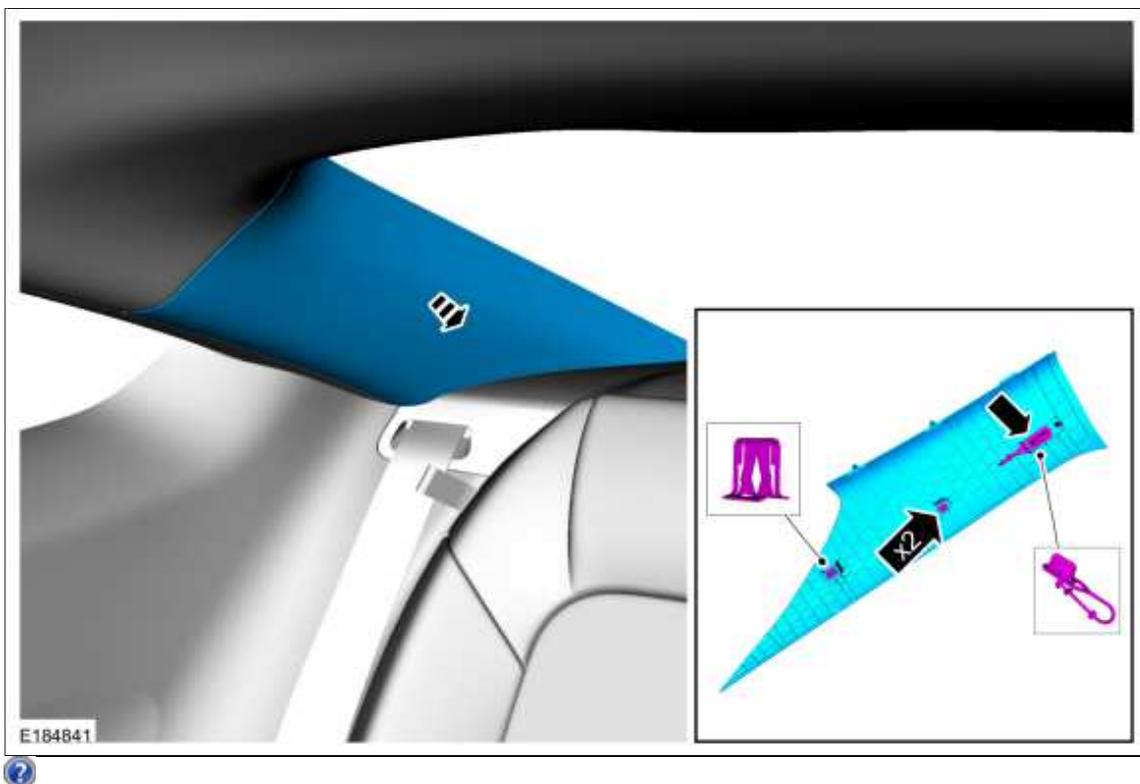


7. Remove the *LH* and the *RH* rear quarter trim panels.  
Refer to: [Rear Quarter Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
8. On both sides, remove the head restraints.



9. Position both front seats in the full forward and full reclined position.



10. Remove the headliner.

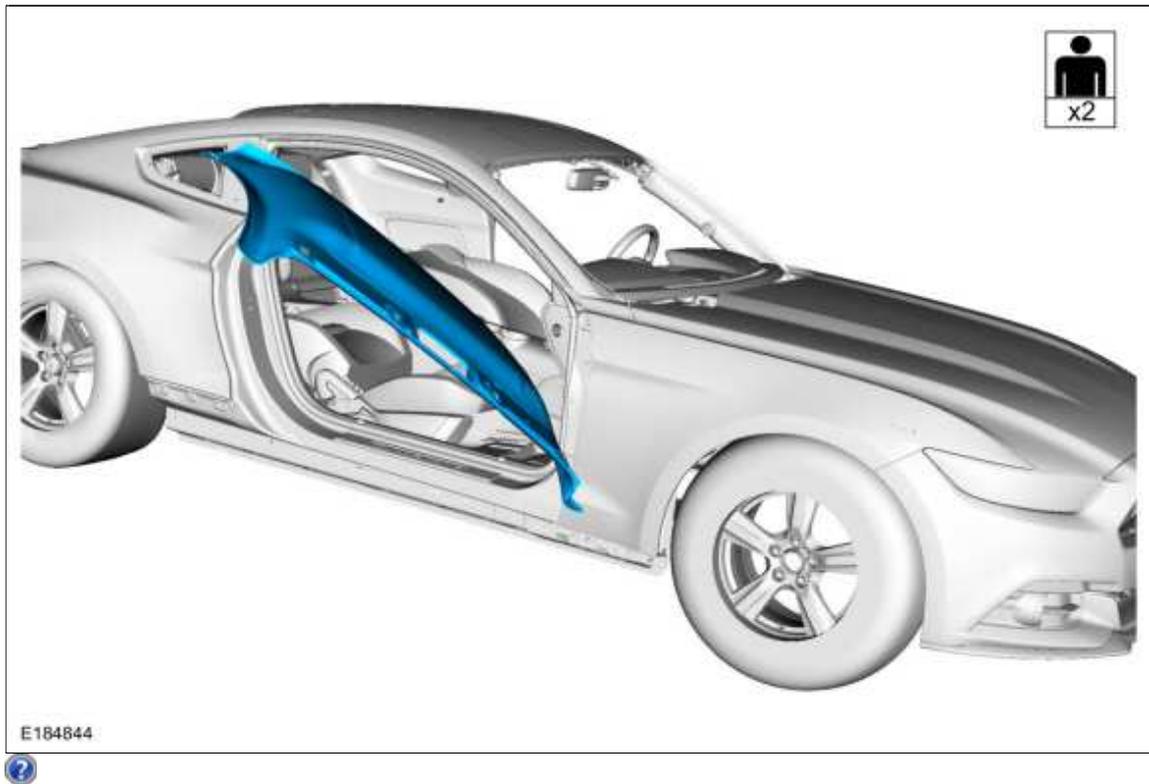

## Installation

1. **NOTE:** *These steps are only necessary when installing a new component.*

**NOTE:** *Obtain the specified adhesive commercially. Depending on the headliner and optional wire harness(es), the purchase of multiple tubes is suggested.*

1. Using tape, mark the wire at the exit points for proper length from headliner-to-body/ roof connectors.
2. Carefully remove the wire harness from the original headliner.
3. Using a marking tool, mark the new headliner with the routing and exit points of the wire harness from the original headliner.
4. **NOTICE: Make sure not to damage the wire harness when cutting the excess adhesive from the wire harness.**

Cut and remove any excess adhesive from the wire harness.

5. Position the wire harness onto the new headliner, making sure the harness has enough length to be connected to the body/roof connectors at the tape location(s) applied earlier. Apply tape to temporarily hold the wire harness in position on the headliner.
6. Apply the adhesive in the same location as the factory installed adhesive along the full length of the wire harness-to-headliner to avoid any **NVH** concern(s).  
*Material : 3M™ Super-Fast Repair Adhesive / 04747*

2. **NOTE:** *Transfer parts as necessary.*

To install, reverse the removal procedure.